




QR Code For
Andriod System



QR Code For
iOS System

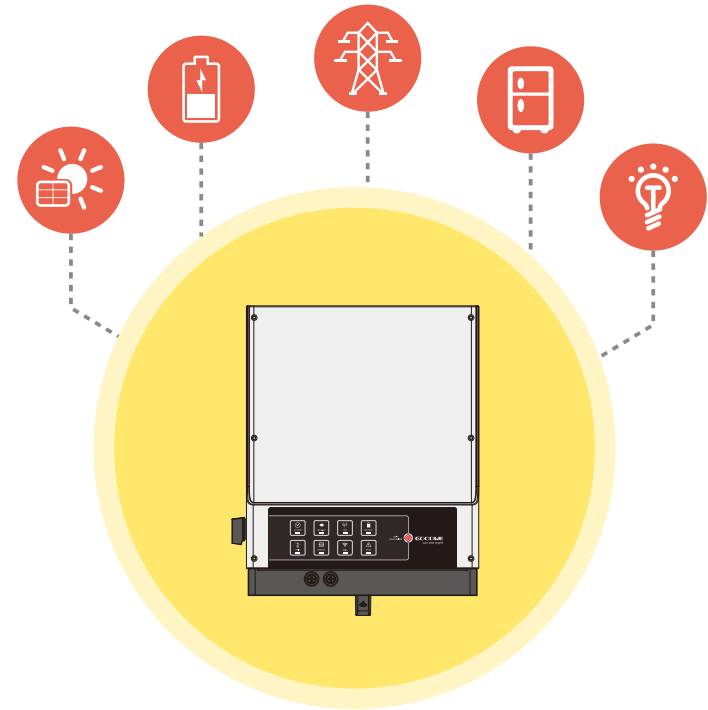

EM QUICK INSTALLATION INSTRUCTIONS

PART 1

QUICK
INSTALLATION

PART 2


BATTERY
CONNECTION

PART 3


WI-FI
CONFIGURATION

Step 1. Instructions For Quick Installation


A Installation Space

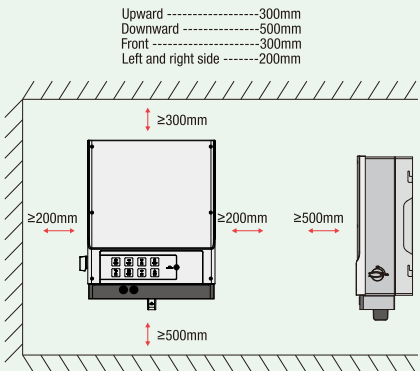


B Dimensions For Drilling Holes

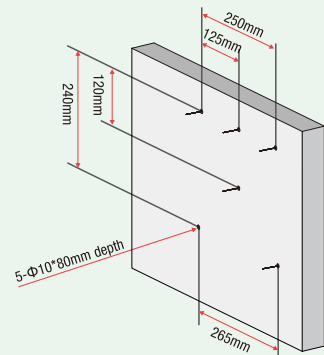

C Fix the Wall Bracket


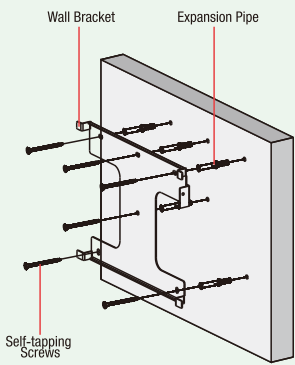


D Installation

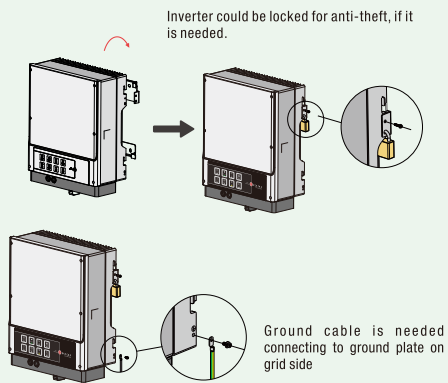


E Battery Wire Assembly and Connection

Description	Size
A External diameter of the wire	10~12mm
B Sectional area of conducting materials	20~25mm ²
C Length of bare wire	Approx.10mm

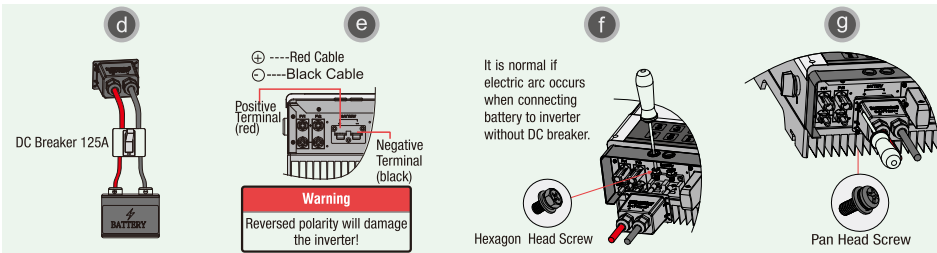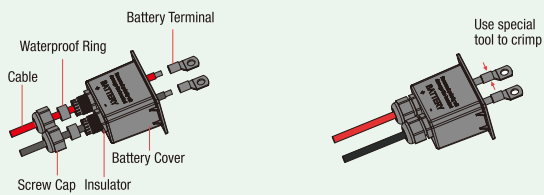


F DC Cable Assembly and Connection


⚠ DC cable should be dedicated PV cable (suggest using 4mm² PV1-F cable)

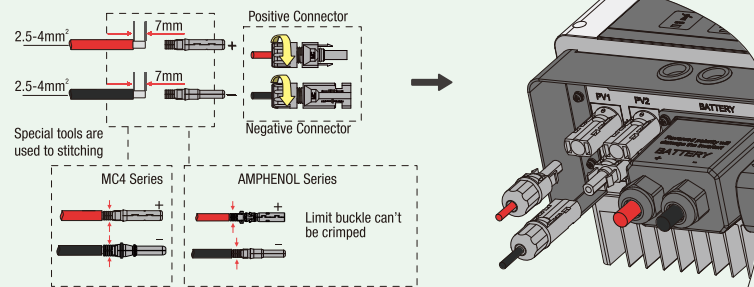

G AC Cable Assembly and Connection

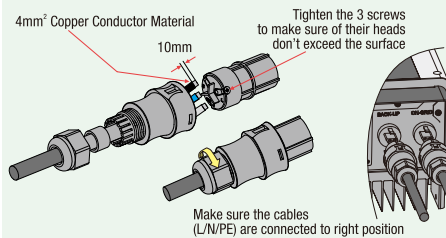


H Communication Cable Connection

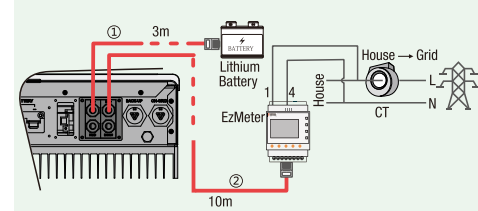

Note: ① To Battery communication cable (Only for lithium battery)
② To EzMeter communication cable (could be extend to max 100m)

I DRED Cable Assembly

⚠ DRED connection is only available for Australia and New Zealand.

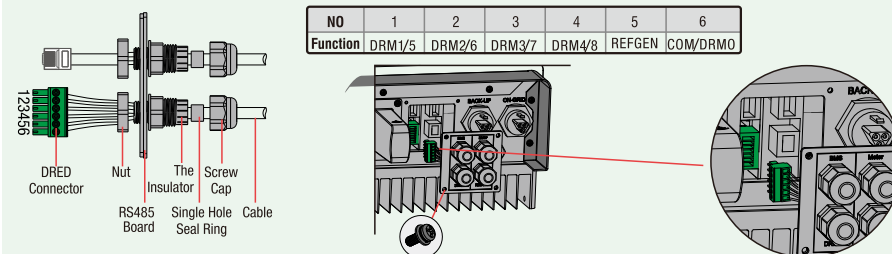


Step 2. SOP of Battery Connection With EM Inverter

BYD GCL LG Pylon


Note: This manual only tells connection methods between battery and GoodWe hybrid inverters. Other operation on battery, please refer to battery user manual.

1. BYD

For BYD B-BOX2.5/5.0/7.5/10/B-Box 13.8 with EM Hybrid Inverter


A  Make sure that the inverter and the battery pack is turned off before connecting the battery pack to the inverter (Refer to Pic.1)

NOTE: If connect two or more batteries, the ADDR on each battery must be set differently.




Pic.1

B To connect the cables coming from the inverter to the BYD battery pack, take the following steps. Connect the power cables to the terminal block of BYD battery pack. Connect the negative cable to "P-" and the positive cable to "P+." (Refer to Pic.2)

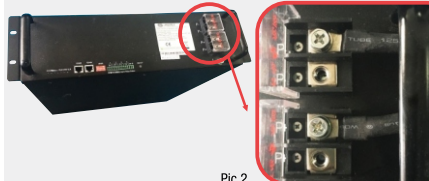


Pic.2

C (a) Cut off the plastic skin of the cable.
(b) Put the cable through the terminal cover plate.
(c) Plug the metal part into the battery R-type terminal (25-8) which in GoodWe accessories box, then crimp the terminal tightly.
(d) Connect the power cable to the terminal block of the hybrid inverter and restore the inverter terminal cover plate. (Refer to Pic.3)

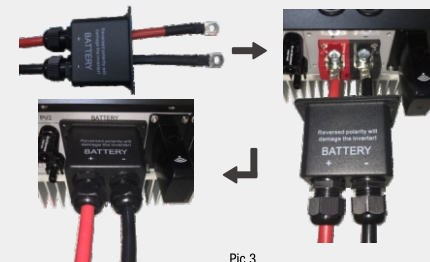


Pic.3

D The communication cable for battery is attached on the inverter (Refer to Pic.4). Please use this cable as battery communication cable.

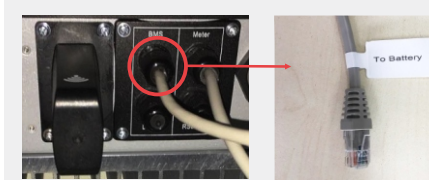


Pic.4

E The other side of "To Battery" cable should be connected to CAN port of BYD BMU box (Pic.5).

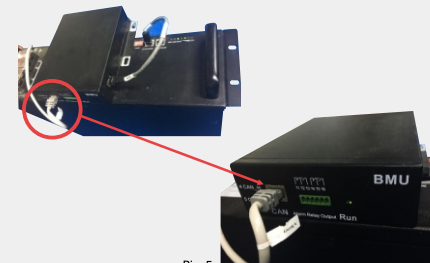


Pic.5

F On PV Master, should choose the right battery type used in your system by "Battery Model" selection (Pic. 6) or battery communication will fail.

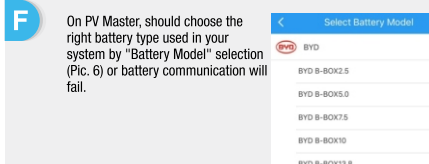


Pic.6

G After all connection and settings done, please check if battery communication is OK on PV Master - Param -> BMS Status, which should be "Communication OK" (Pic. 7)

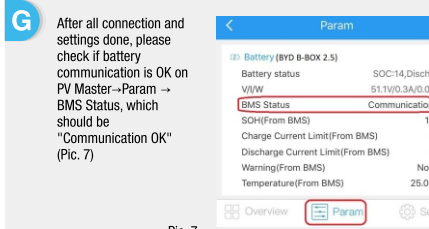


Pic.7

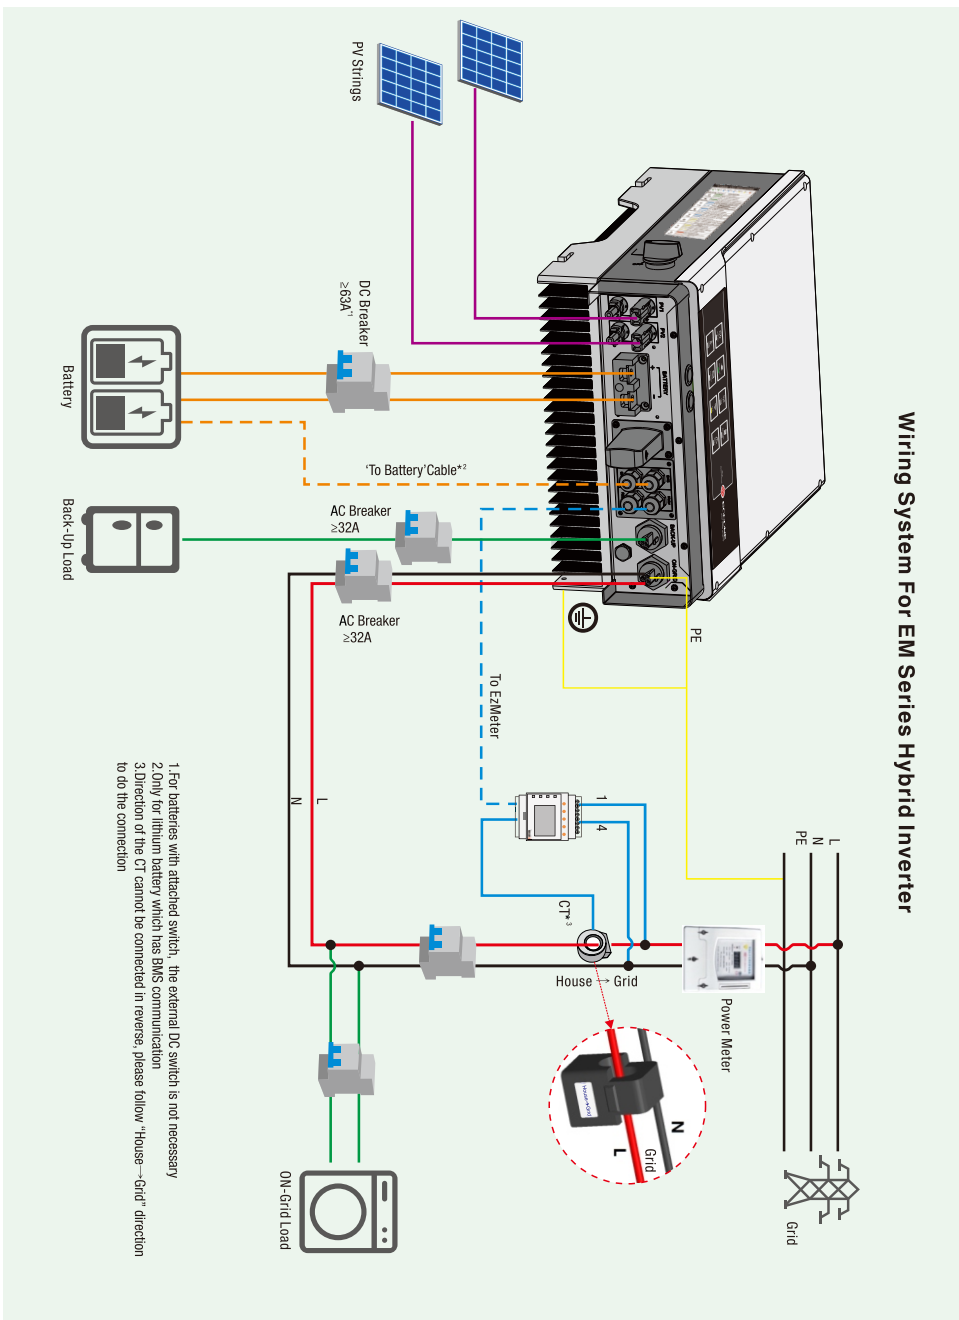


Wiring System For EM Series Hybrid Inverter

2. GCL

For GCL 5.6 KWH / 5.6 KWH*2 / 5.6 KWH*3 / 5.6 KWH*4 with EM Hybrid Inverter.


A  Make sure that the inverter and the battery pack is turned off before connecting the battery pack to the inverter (Refer to Pic.1)

Note: If connect multi batteries (max 4 pieces), please refer to battery user manual to do configuration on batteries.




Pic.1

B To connect the cables coming from the inverter to the GCL battery pack, take the following steps.
Connect the power cables to the terminal block of GCL battery pack. Connect the negative cable to "-" and the positive cable to "+". (Refer to Pic.2)




Pic.2

C (a) Cut off the plastic skin of the cable.
(b) Put the cable through the terminal cover plate.
(c) Plug the metal part into the battery R-type terminal (25-8) which in GoodWe accessories box, then crimp the terminal tightly.
(d) Connect the power cable to the terminal block of the hybrid inverter and restore the inverter terminal cover plate. (Refer to Pic.3)

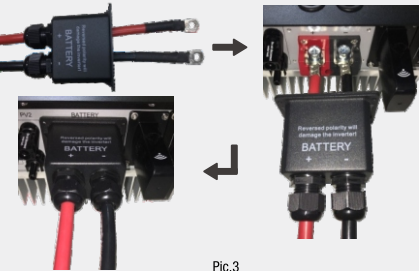


Pic.3

D The communication cable for battery is attached on the inverter (Refer to Pic.4)
Please use this cable as battery communication cable.




Pic.4

F On PV Master, should choose the right battery type used in your system by "Battery Model" selection (Pic. 6) or battery communication will fail.




Pic.6

E The other side of "To Battery" cable should be connected CAN port of GCL battery (Pic.5)

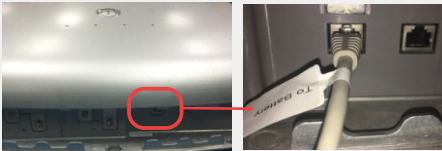

Pic.5


G After all connection and settings done, please check if battery communication is OK on PV Master → Param → BMS Status, which should be "Communication OK" (Pic. 7)




Pic. 7

3. LG


For LG 3.3/6.4/6.5/10 with EM Hybrid Inverter.

A  Make sure that the inverter and the battery pack is turned off before connecting the battery pack to the inverter (Refer to Pic.1)

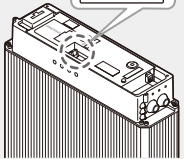

Pic.1

B Remove the top cover. Hold both sides of the top cover and pull it upwards (Refer to Pic.2)

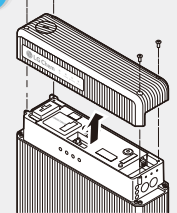


Pic.2

C Connect the power cables to the terminal block through the grommet (Refer to Pic.3)

a) Remove the terminal cover plate, which is placed over the terminal block.


b) Plug the metal part into the battery R-type terminal (25-8) which in Cable Accessories for LG Battery, then crimp the terminal tightly.

c) Restore the battery terminal cover plate.

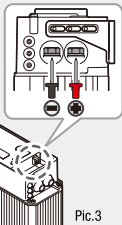


Pic.3

D (a) Cut off the plastic skin of the cable.
(b) Put the cable through the terminal cover plate.
(c) Plug the metal part into the battery R-type terminal (25-8) which in GoodWe accessories box, then crimp the terminal tightly.
(d) Connect the power cable to the terminal block of the hybrid inverter and restore the inverter terminal cover plate. (Refer to Pic. 4)




Pic.4

E The communication cable for battery is attached on the inverter (Refer to Pic.5)
Please use this cable as battery communication cable.




Pic. 5

 F The other side of "To Battery" cable should be connected CAN port on the top side of LG battery (Refer to Pic.6)




Pic.6

H On PV Master, should choose the right battery type used in your system by "Battery Model" selection (Pic. 8) or battery communication will fail.

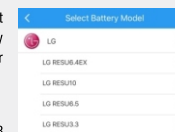


Pic.8

G There are three DIP switches and three rotary switches on battery, which should be set as below (Refer to Pic. 7):

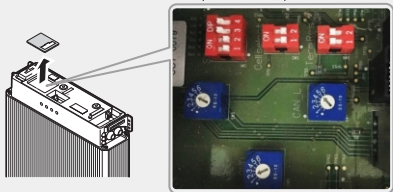

Pic.7

I After all connection and settings done, please check if battery communication is OK on PV Master → Param → BMS Status, which should be "Communication OK" (Pic. 9)

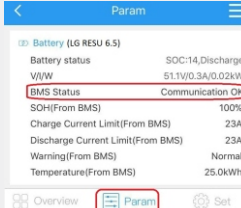

Pic. 9


4. Pylon

For Pylon US2000B Series With EM Hybrid Inverter.



Pic.1

- C**
- Cut off the plastic skin of the cable.
 - Put the cable through the terminal cover plate.
 - Plug the metal part into the battery R-type terminal (25-8) which in GoodWe accessories box, then crimp the terminal tightly.
 - Connect the power cable to the terminal block of the hybrid inverter and restore the inverter terminal cover plate. (Refer to Pic. 3)

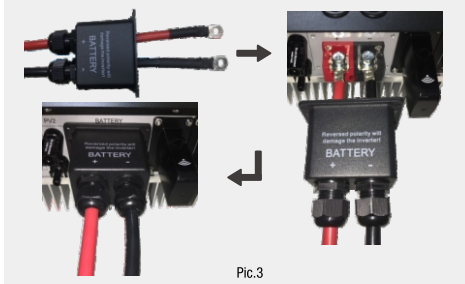


Pic.3

- E** The other side of "To Battery" cable should be connected CAN port of Pylon battery (Pic. 5)




Pic.5

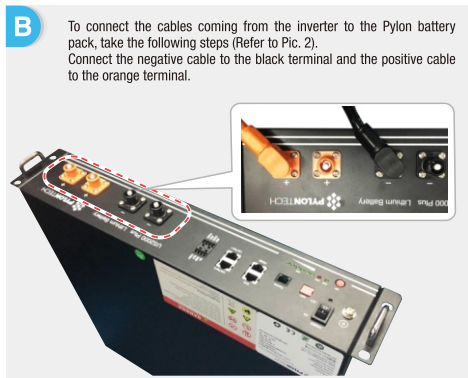


- B** To connect the cables coming from the inverter to the Pylon battery pack, take the following steps (Refer to Pic. 2). Connect the negative cable to the black terminal and the positive cable to the orange terminal.


- D** The communication cable for battery is attached on the inverter (Refer to Pic.4) Please use this cable as battery communication cable.

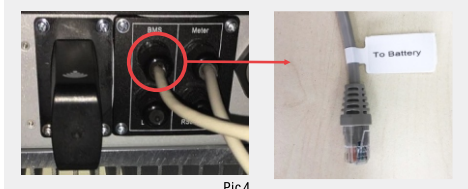

Pic.4

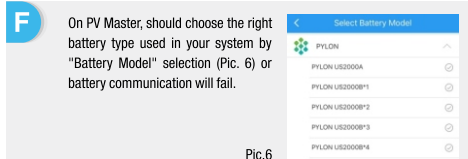

Pic.6

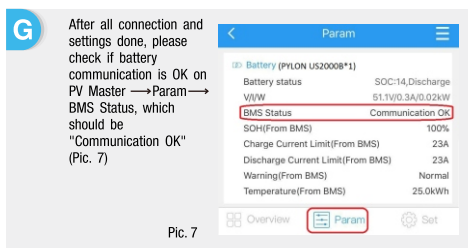


Pic.7

- G** After all connection and settings done, please check if battery communication is OK on PV Master → Param → BMS Status, which should be "Communication OK" (Pic. 7)

Step 3. Wi-Fi Conguration Instruction

Note:Wi-Fi Configuration could also be done on PV Master APP, for details, please download "PV Master Operation Introduction" from www.goodwe.com

- A Preparation**
- Power Wi-Fi inverter (or Power on Inverter) on.
 - Power router on.

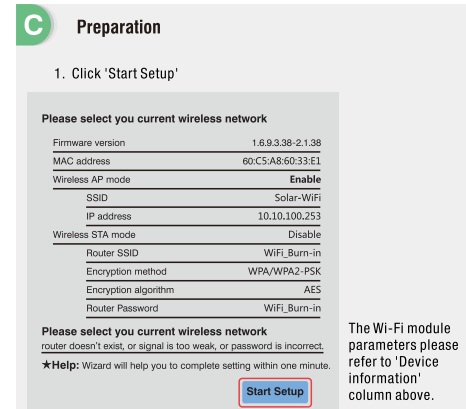


- C Preparation**
- Click 'Start Setup'

Please select you current wireless network


Firmware version	1.6.9.3.38-2.1.38
MAC address	60:C5:A8:60:33:E1
Wireless AP mode	Enable
SSID	Solar-WiFi
IP address	10.10.100.253
Wireless STA mode	Disable
Router SSID	WiFi_Burn-in
Encryption method	WPA/WPA2-PSK
Encryption algorithm	AES
Router Password	WiFi_Burn-in

Please select you current wireless network
router doesn't exist, or signal is too weak, or password is incorrect.
★Help: Wizard will help you to complete setting within one minute.

The Wi-Fi module parameters please refer to 'Device information' column above.

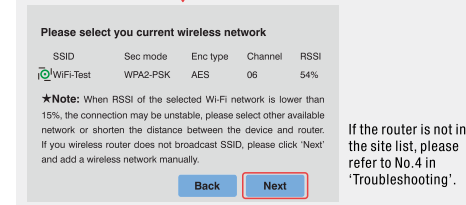

- E Troubleshooting**
- | No. | Problem | Checking Items |
|-----|------------------------------------|---|
| 1 | Cannot Find Solar-WiFi Signal | 1. Make sure inverter is powered on;
2. Move your smart device closer to inverter;
3. Restart inverter;
4. Do 'WiFi Reload' operation refer to user manual. |
| 2 | Cannot connect to Solar-WiFiSignal | 1. Try password: 12345678;
2. Restart inverter;
3. Make sure there is no other device connected to Solar-WiFi;
4. Do 'WiFi Reload' operation and try again. |
| 3 | Cannot login website 10.10.100.253 | 1. Make sure user name and password you use are both admin;
2. Do 'WiFi Reload' operation and try again;
3. Try another browser (suggest use Google, FireFox, IE, Safari etc.);
4. Make sure website you log in is 10.10.100.253 |
| 4 | Cannot find router SSID | 1. Move router closer to inverter or use a Wi-Fi repeater device;
2. Connect to router and login the setting page to check the channel it uses. Please make sure the channel is not bigger than 13. Otherwise, modify it. |

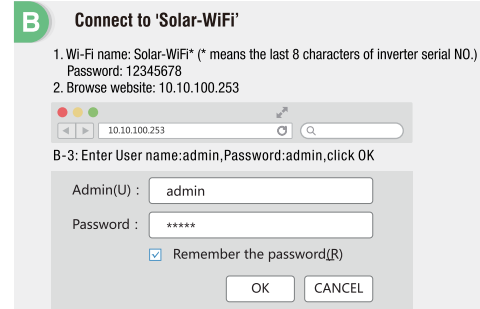


- B Connect to 'Solar-WiFi'**
- Wi-Fi name: Solar-WiFi* (* means the last 8 characters of inverter serial NO.) Password: 12345678
 - Browse website: 10.10.100.253

B-3: Enter User name:admin,Password:admin,click OK

Admin(U) : admin
Password : *****
 Remember the password(R)

OK CANCEL

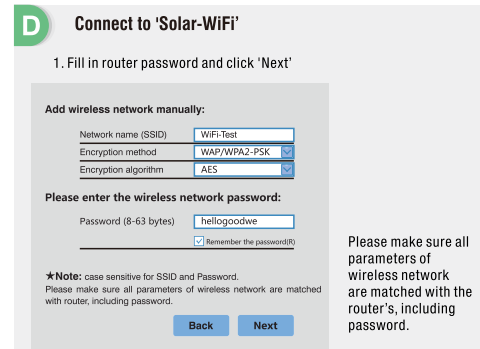

- D Connect to 'Solar-WiFi'**
- Fill in router password and click 'Next'

Add wireless network manually:

Network name (SSID)	WiFi-Test
Encryption method	WAP/WPA2-PSK
Encryption algorithm	AES


Please enter the wireless network password:

Password (8-63 bytes) : hellogoodwe
 Remember the password(R)

★Note: case sensitive for SSID and Password.
Please make sure all parameters of wireless network are matched with router, including password.

Back Next

Please make sure all parameters of wireless network are matched with the router's, including password.

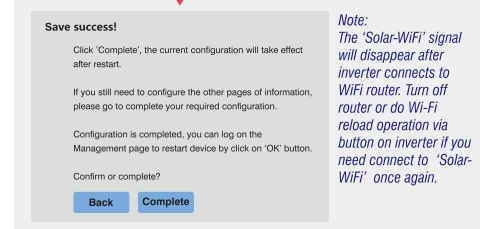

Save success!

Click 'Complete', the current configuration will take effect after restart.

If you still need to configure the other pages of information, please go to complete your required configuration.

Configuration is completed, you can log on the Management page to restart device by click on 'OK' button.

Confirm or complete?

Back Complete

Note: The 'Solar-WiFi' signal will disappear after inverter connects to WiFi router. Turn off router or do Wi-Fi reload operation via button on inverter if you need connect to 'Solar-WiFi' once again.

No.	Problem	Checking Items
5	Cannot Find Solar-WiFi Signal	1.Restart inverter 2.Connect to Solar-WiFi and login again, check the 'SSID', 'Security Mode', 'Encryption Type' and 'Pass Phrase' is matching with that of router or not; 3.Connect to router and login to check if the connection reaches the maximum amount or not, and to check the channel of it uses. Please make sure the channel is not bigger than 13. Otherwise, modify it; 4.Restart router ; 5.Move router closer to inverter or use a Wi-Fi repeater device.
6	After configuration, WiFi Led on inverter blink four times repeatedly	1.Connect to the router and visit the portal www.goodwe-power.com. Check the portal is available or not; 2.Restart router and inverter;